

Adjusting Preferences


Section 3.1.1 – Hardware

Once the vending application has loaded, follow the instructions in *Section 1.1.1 – Loading the Booth Menu*.

Once the Linux Booth Menu has loaded.

PRESS 'M'

This will load the audio control menu, once loaded use the Up / Down arrows to make a selection and the Left / Right arrows to adjust the particular options value. The below illustration is similar to the menu you will see.

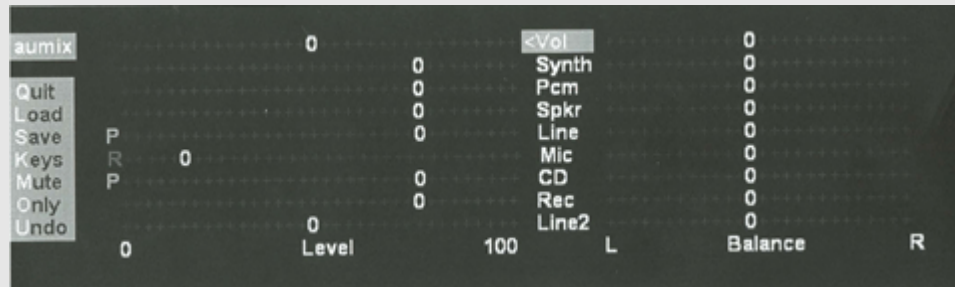

Once the adjustments have been made.

PRESS 'S'

This will save any changes made.

PRESS 'Q'

This will close this menu. Once you are back to the Linux Booth Menu select the reboot option.